

LINCOLN Zephyr Fastback (1936) Maintenance Manual

| | |
|--|----------------------|
| Power | 100 KW @ 5700 RPM |
| Torque | 165 Nm @ 3200 RPM |
| Acceleration 0-62 Mph (0-100 kph) | 16.3 s |
| Unladen Weight | 2389.8 lbs |
| Combined | 24.6 mpg US |
| Tire Size | 195/65 R15T |
| Length | 177.6 in |
| Top Speed | 96 mph |
| Width | 66.3 in |
| Wheelbase | 100.7 in |
| Displacement | 1921 cm ³ |
| Highway | 27.3 mpg US |
| Gross Weight Limit | 4563.5 lbs |
| Front/rear Track | 60.2/59.8 in |
| Gearbox | 5 Speed Manual |
| Cargo Volume | 22.7 cuFT |
| Fuel System | Fuel Injection |
| CO2 Emissions | 245 g/km |