

OPEL Astra 5 Doors 1.6 Ecotec 6AT (115 HP) User Manual

| | |
|--|---|
| CO2 Emissions | 398 g/km |
| Power | 447.2 KW @ 5250-6000 RPM |
| Length | 191.9 in |
| Highway | 23.7 mpg US |
| Unladen Weight | 2557.4 lbs |
| Torque | 681 Nm @ 1700 RPM |
| Gross Weight Limit | 7165 lbs |
| Tire Size | 215/60 VR15 |
| Front/rear Track | 56.5/56.7 in |
| City | 12.3 mpg US |
| Acceleration 0-62 Mph (0-100 kph) | 15.7 s |
| Displacement | 3998 cm ³ |
| Cd | 0.43 |
| Front | vented disc brakes 405x36mm |
| Combined | 16.5 mpg US |
| Cargo Volume | 16.6 cuFT |
| Wheelbase | 128.6 in |
| Height | 68.6 in |
| Width | 66.7 in |
| Top Speed | 192 mph |
| Ground Clearance | 5.6 in |
| Gearbox | 6-speed automatic transmission with steering column-mounted paddleshift |
| Rear | 335 mm ventilated iron / 356 mm cross-drilled CSiC |